




Sure Signal Products
Fuse Replacement Instructions
 (or watch the video on www.suresignalproducts.com/recall/)

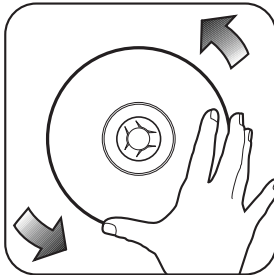


Step 1
 Remove the heat alarm from wall or ceiling with a counter-clockwise rotation.

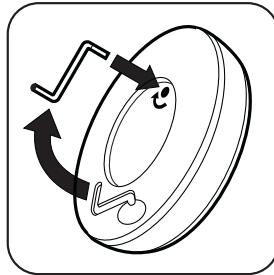


Step 2
 Unsnap winding key from back of alarm and insert flat end into slot (next to arrow).

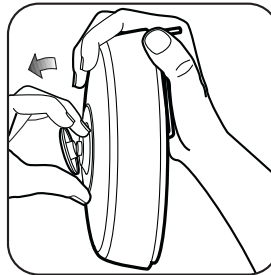


Step 3
 While holding the winding key firmly to prevent unwinding, unsnap the fuse with a firm pull.

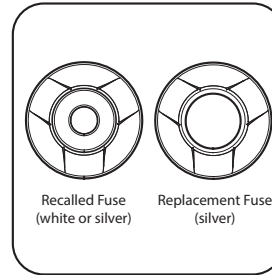


Step 4
 Locate the replacement fuse that was received in the mail.

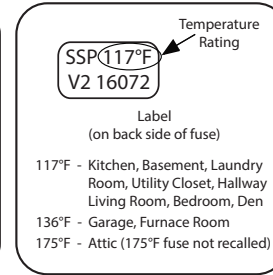


Step 5
 Select the fuse with the appropriate temperature rating for each location. The rating is located on the back of the fuse.

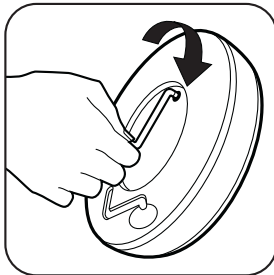


Step 6
 If the alarm has unwound, **even a small amount**, use the key to rewind the alarm. The alarm is not fully wound until the key hits the stop at the end of winding.

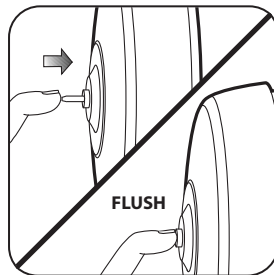


Step 7
 Test that the alarm is fully wound by depressing the pin on the front of the alarm. The fuse cannot be installed unless the pin can be pressed **completely flush**.

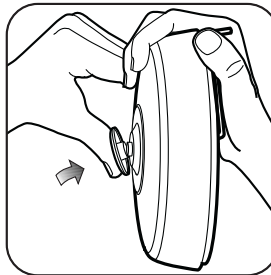

Step 8
 While holding the key firmly against its stop to prevent **any unwinding**, line up the new fuse with the front of the alarm and snap firmly into place.

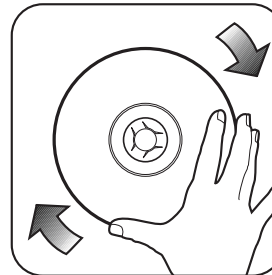

Step 9
 Re-mount the alarm to the wall/ceiling with a clockwise rotation.

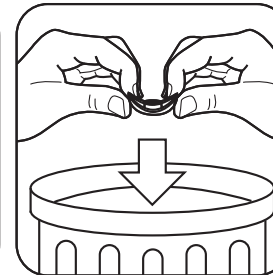

Step 10
 Using both hands, firmly bend the old fuse and discard in the trash.